


# VicSpacer MKII

Installation Manual


EN

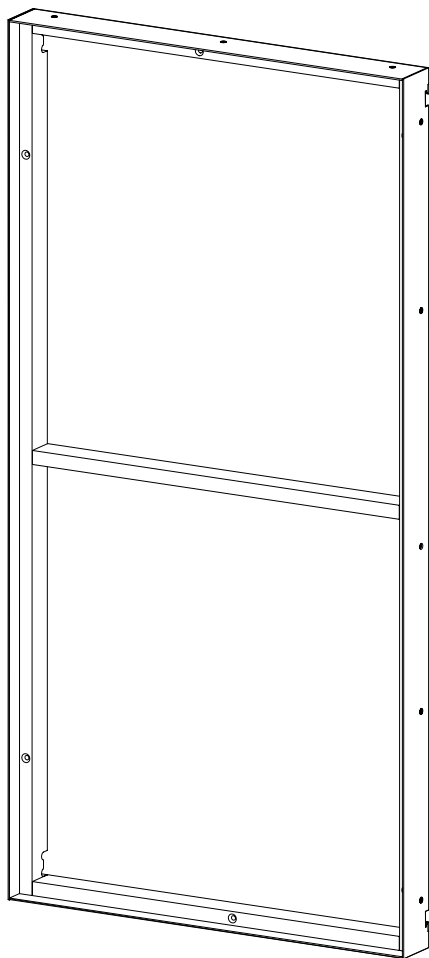


**V//COUSTIC**

✓ MATERIAL NEEDED

Included

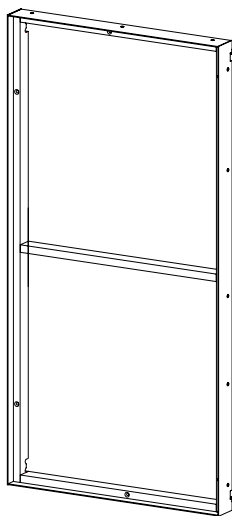

VicSpacer MKII



Silicone Drop




VicFix Mini




VicSpacer Gauge


Not Included

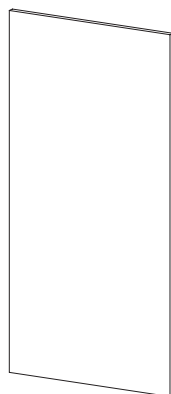

Flat Panel VMT

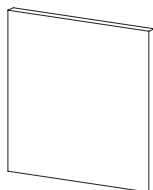

VicPET Wool Filling  
\*Included in the VicSpacer Plus MKII




Level



Measuring Tape




Wall Plugs and Screws




VicFix Corner




Flexi Glue Ultra



Screwdriver



Caulking Gun




Drill

## Installation Options


This product can be installed on:

- i) the wall using VicFix Mini (included) or fixing screws (not supplied);
- ii) the ceiling using fixing screws and wall plugs;
- iii) vertical corners using VicFix Corner Plus (sold separately).


### i) Wall Installation

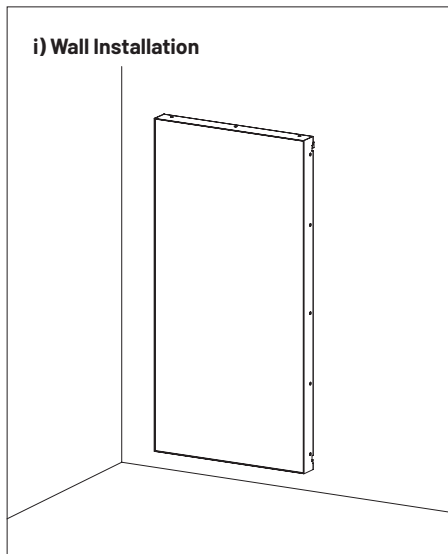

### ii) Ceiling Installation


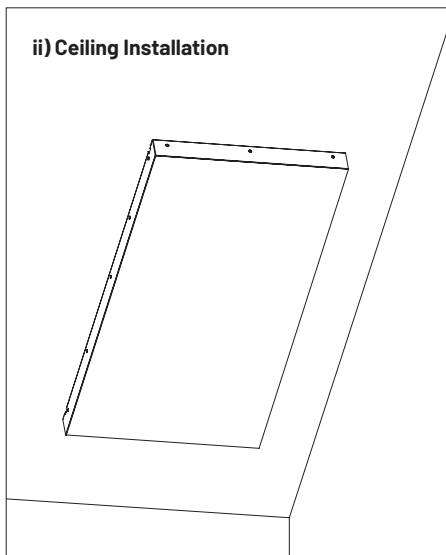


### iii) Corner Installation

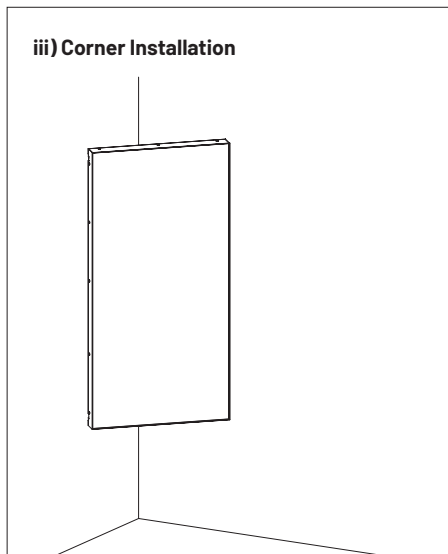


**1**



Turn the VicSpacer on its back and apply the silicone drops as indicated in the diagram.

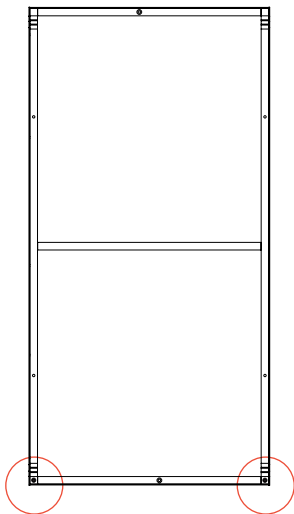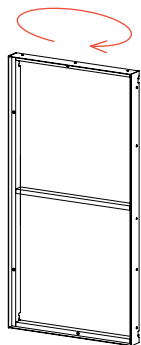

Steps Material

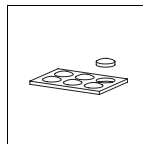
**2**

Using the gauge.

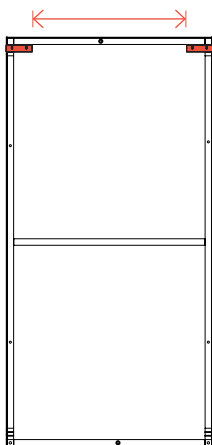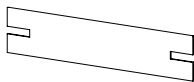




When installing the VicFix Mini, fix the screws in the centre of the slotted holes so that you can vertically readjust the level of the supports and allow alignment between panels. In multi-panel installations, we recommend the use of VicFix J Profile 2m (sold separately).

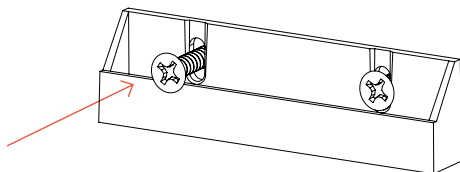



### Wall installation - One unit

1


After defining the place where you want to install the VicSpacer, start marking the position of the first VicFix Mini and use the gauge for the next steps.

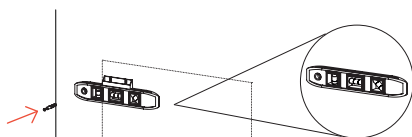


Steps Material

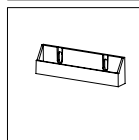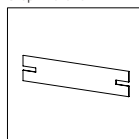


2

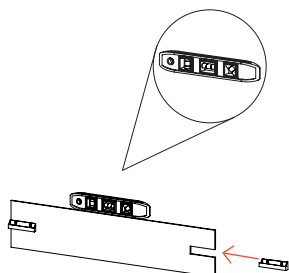

3

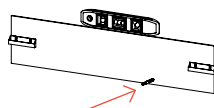


4

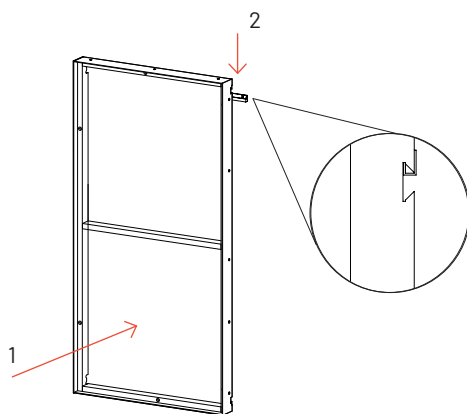


5

Insert the VicPET Wool Filling (only available in VicSpacer Plus MKII version).

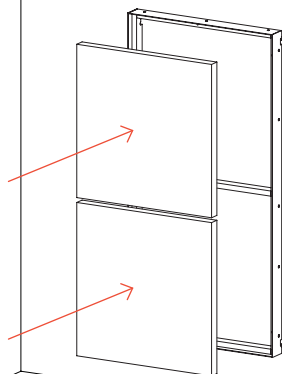



6

For wall installation and if you do not want a permanent fixation of the Flat Panel VMT, you can apply the panel directly to the Vicspacer, inserting it inside the metal frame.

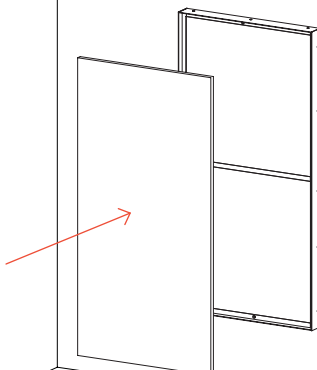




i

If you want a more secure and permanent fixation, fix the Flat Panel VMT with Flexi Glue Ultra by applying a bead of glue to the surface of the structure. For ceiling installation, the Flat Panel VMT must be glued with Flexi Glue Ultra.

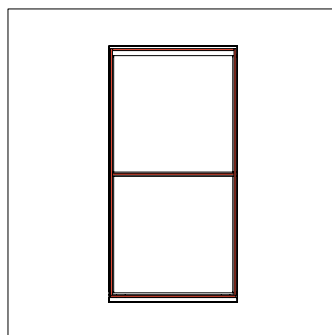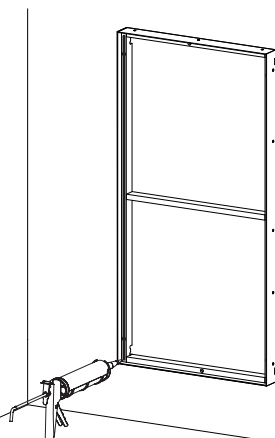

## Direct Installation - Vertical - Screw mounted panel (\*screws and wall plugs not included)



For fixing directly to the wall (or ceiling), the dimensions between the holes are as follows. You should use the 6 attachment points.

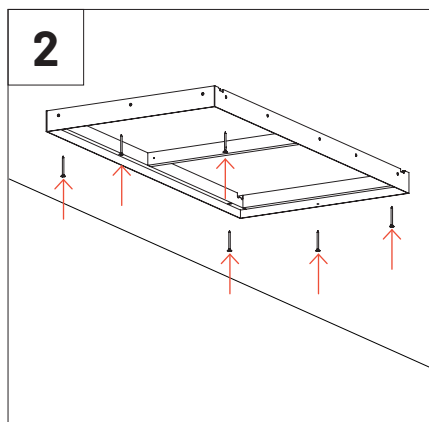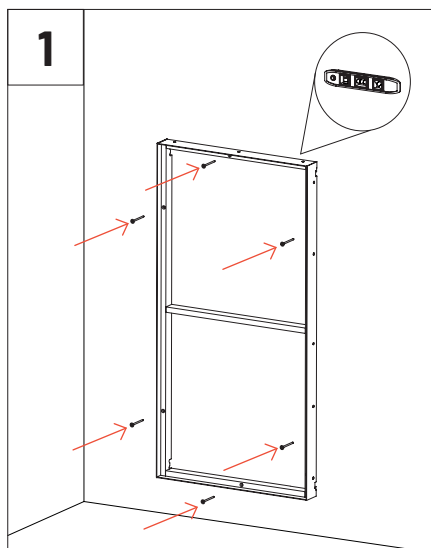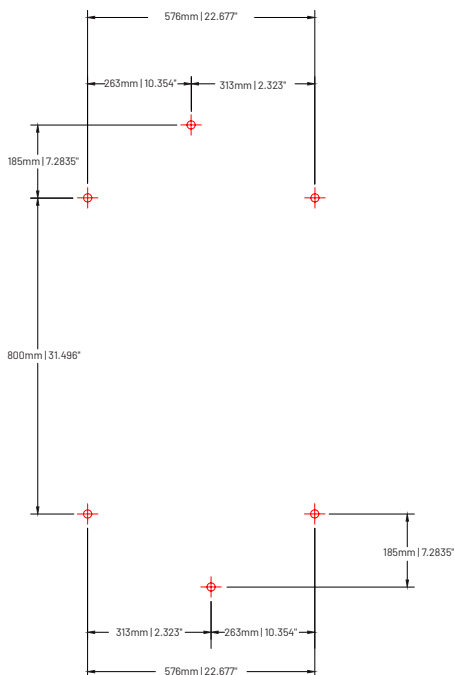



**Please ensure that the VicSpacer is installed using the six pre-defined attachment points.**



**Direct Installation - Horizontal - Screw mounted panel (\*screws and wall plugs not included)**

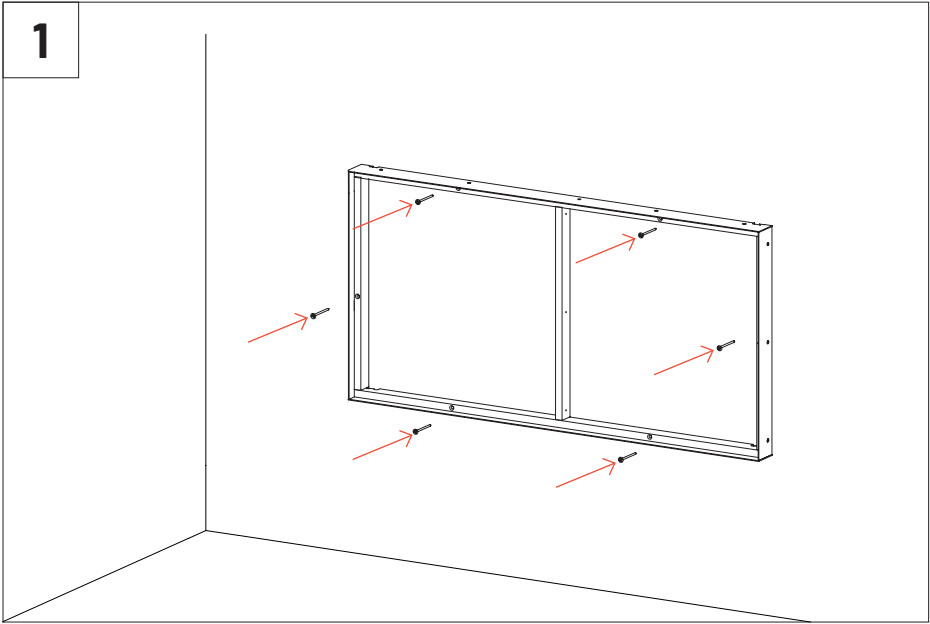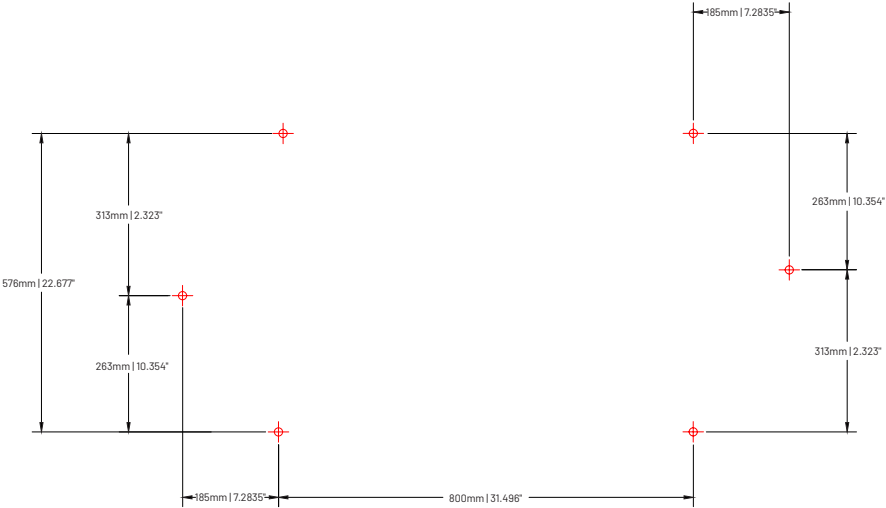

**Direct Installation** - For a cleaner look, you can choose to remove the metal parts between two panels. To unscrew them you will need a RW10 bit (Würth).

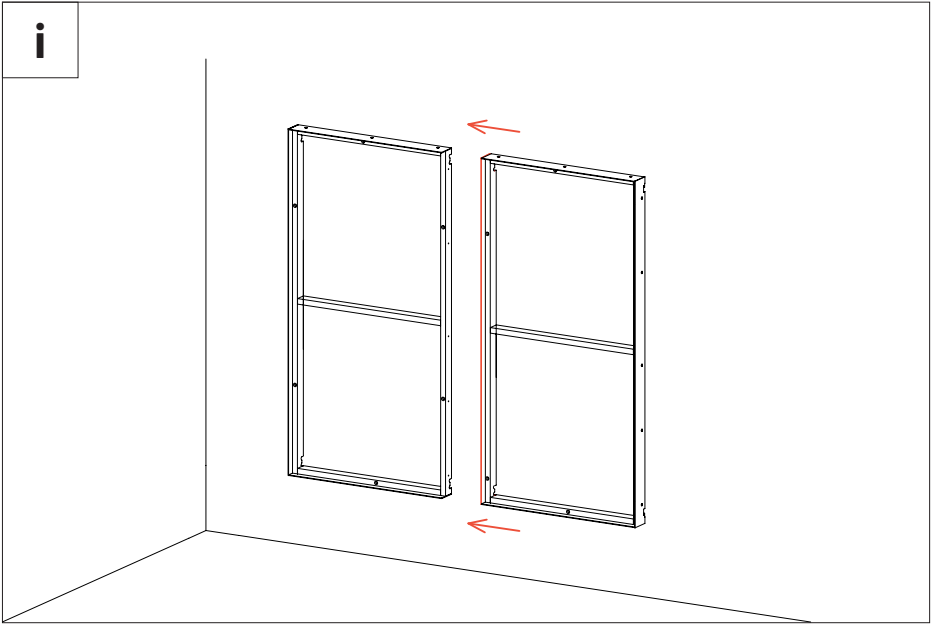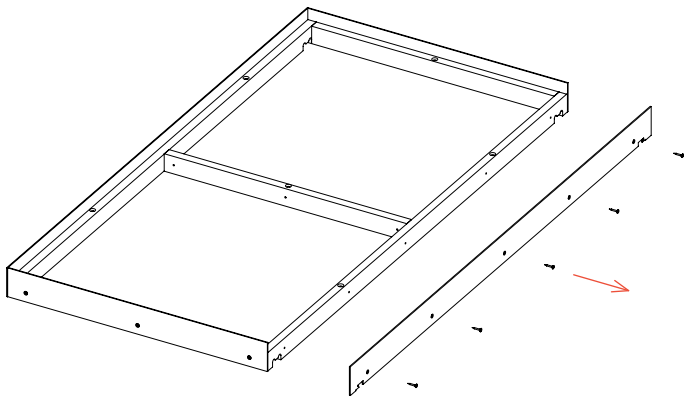

Main Office, R&D & Logistics

Rua do Pólo 3, nº 151

4590-001 Carvalhosa

T (+351) 255 136 746

Office

Rua Quinta do Bom Retiro Nº 16, Armazém 9

2820-690 Charneca da Caparica, Portugal

T (+351) 212 964 100

Info and Sales

E [sales@vicoustic.com](mailto:sales@vicoustic.com)

[www.vicoustic.com](http://www.vicoustic.com)

**V//COUSTIC**  
INNOVATIVE ACOUSTIC SOLUTIONS

© Vicoustic, 2024 | V1

No parts of this document might be copied and/or published without written consent of Vicoustic.