


# VicFix Frame 2x2

## INSTALLATION PROCEDURES

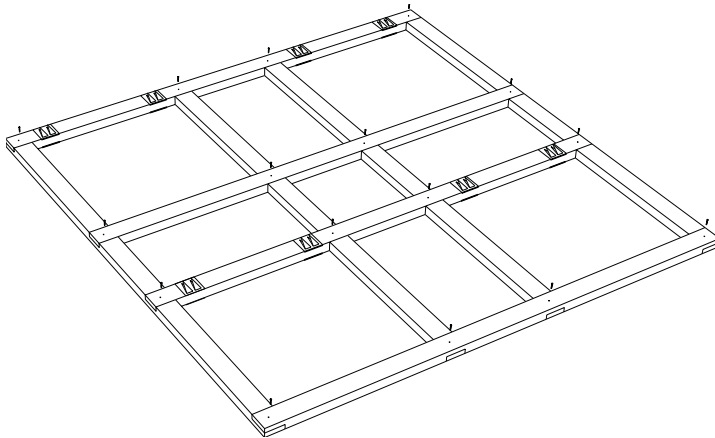

### Required Apparatus:

VicFix Frame 2x2 Items:

8 x Wood Part (100cm)

4 x Triangular Part

8 x Metal Spike Part

Accessories:


16 x Screws (3x20 Flat Head)

8 x Nails


## Bill of Materials



Wood Part (100cm)

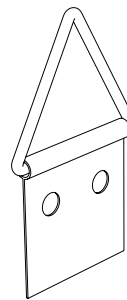


Triangular Part

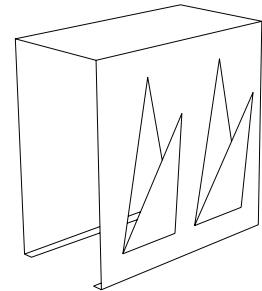

Metal Spike Part



Nails



Screws


# VicFix Frame 2x2

## INSTALLATION PROCEDURES




### Step 1

Push four spike parts on two different wooden 100cm pieces.

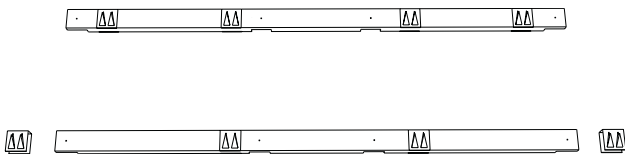


### Step 2

Fit in all screws as shown on the pictures.

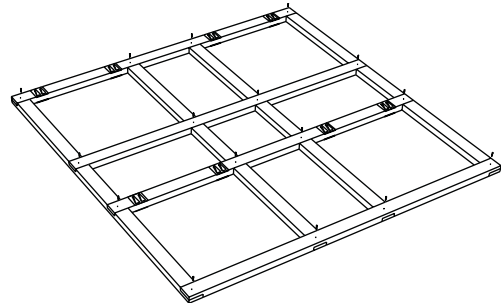

### Step 3

Hammer the two nails per each triangular part. Then, fit two screws onto your wall and use these triangular parts to hold your frame in place. Make sure the two screws are correctly levelled on your wall.

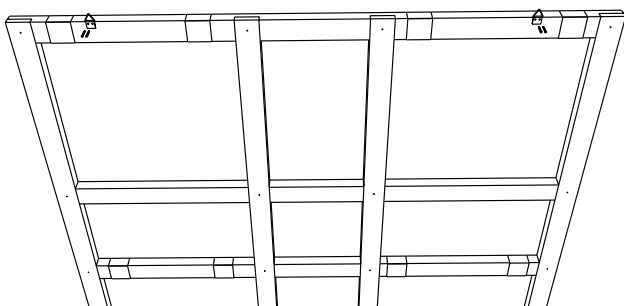

### Step 4

Push your Vicoustic acoustic panels into the spiked pieces at a 45° angle for the best fit.

