


VicFix Metallic

INSTALLATION PROCEDURES



Vicoustic
Innovative Acoustic Solutions

Bill of Materials

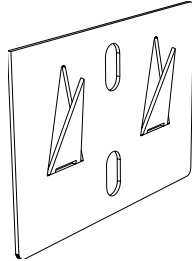

Spiked metal part




Screws

Required Apparatus:

- 10 x Metal Spike Part
- 20 x Screws (Flat head 3x20 mm)


Step 1

Make sure the spikes are forming a 45° angle with the metal piece itself. Push them slightly out if needed.

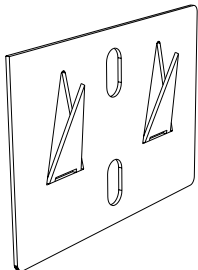

Step 3

Push your Vicoustic panel into the piece at a 45° angle for the best fit.

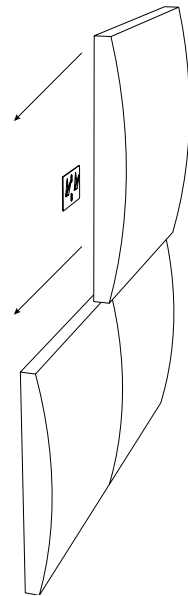

Step 2

Screw in one spiked metal piece per each Vicoustic panel.

